



# Mobiflight Installation and configuration manual


1. If you're already using Mobiflight :
  - download configuration as per **Step 3**
  - then skip to **Step 7**
2. Download and install latest version of Mobiflight software (currently 11.x)  
<https://www.mobiflight.com/en/download.html>
3. Download the corresponding configuration file from GitHub repository  
<https://github.com/PilotWisdom/PanelConfigs/>
  - Browse to the configuration file (Flaps for MSFS in this example), open it on GitHub
  - Use **"download raw file"** button to make sure you get the actual file content
  - Save the file to a local folder (i.e. Downloads)

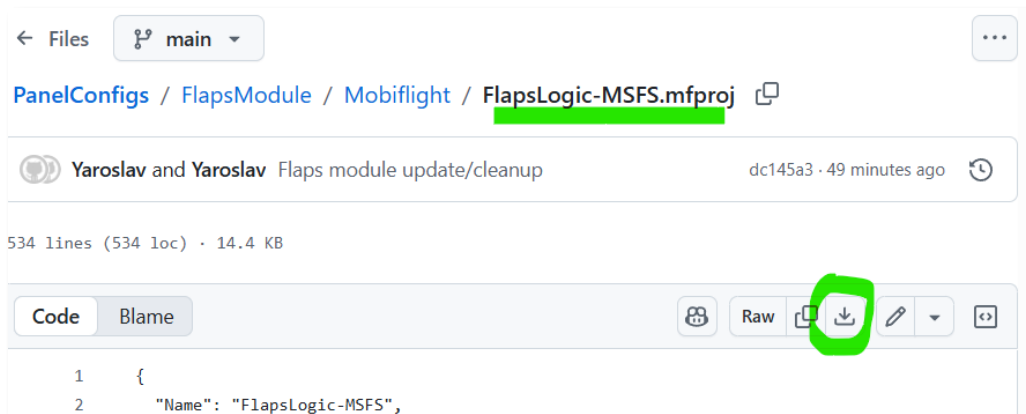


4. Start Mobiflight Connector, create a new project (File – New).  
Give it a name, select your flight simulator type and click **Create Project**

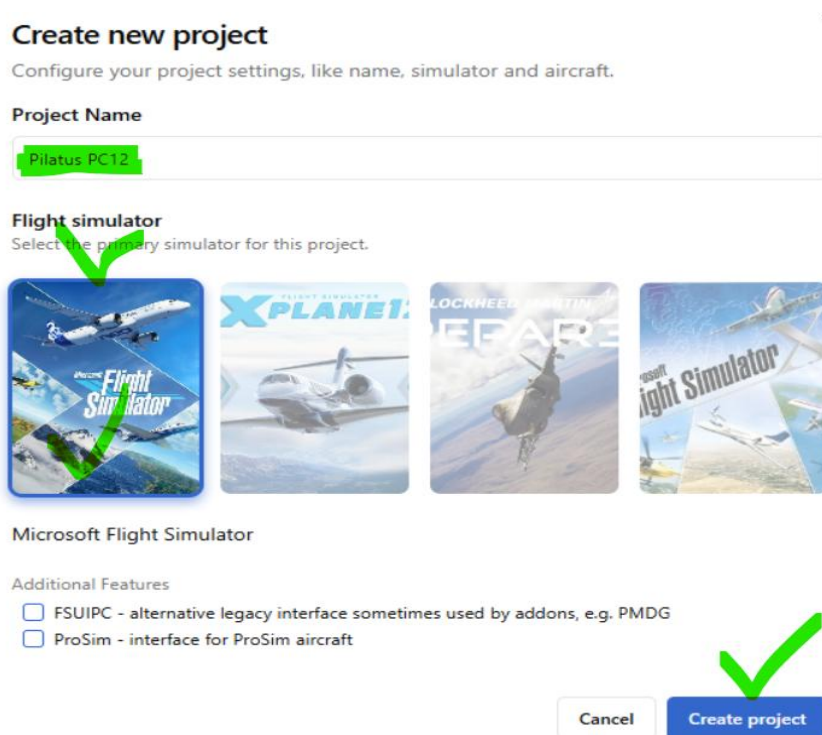


5. Save the newly created project to your local hard drive

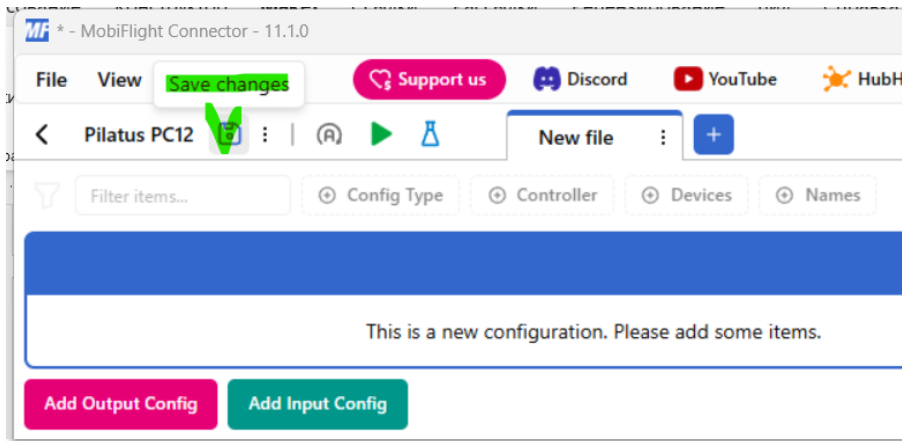


6. For your convenience, remove the default empty tab

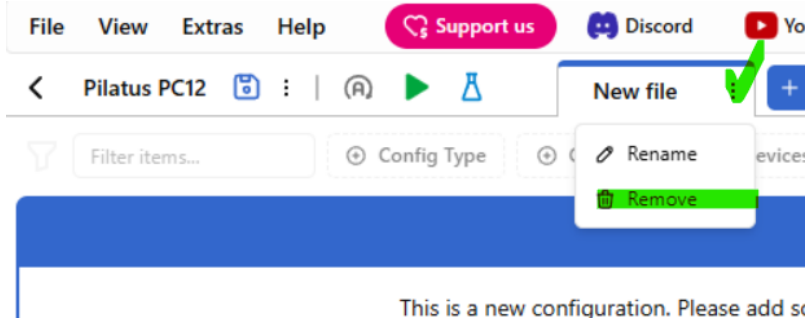


7. Import configuration file from **Step 3** into a new tab of your project:

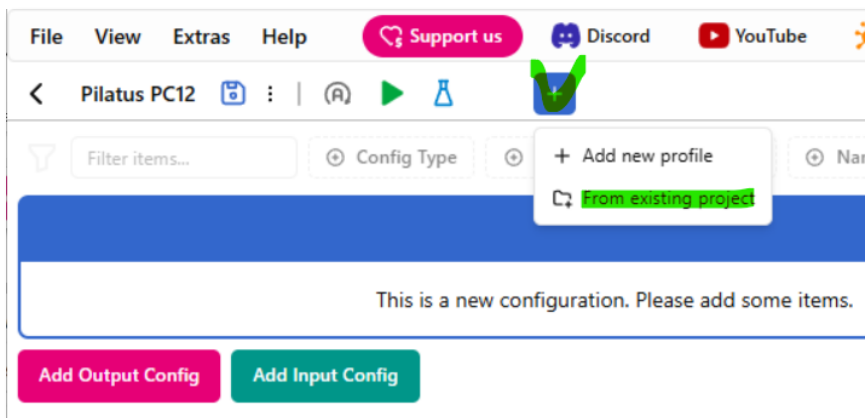


8. Save the project (via File – Save from top menu or the Save button)

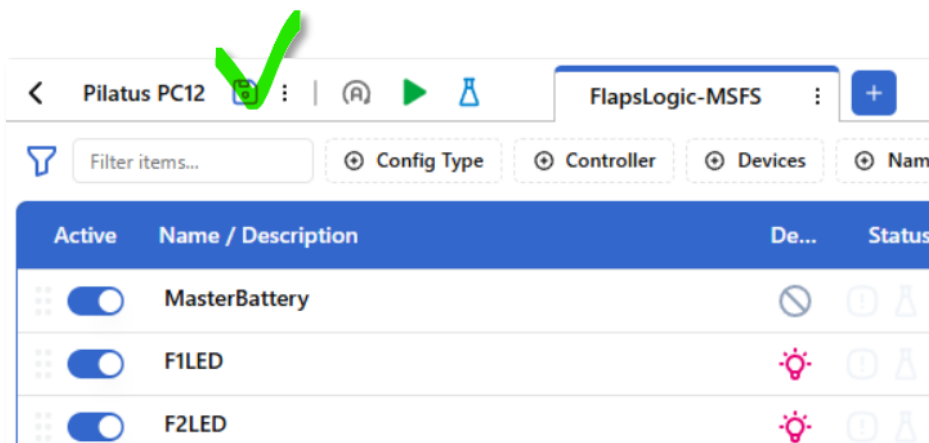

9. Connect your panel/module to the computer;  
connect Power when applicable  
Wait for a few seconds to let your machine recognize new device.
10. Go to Extras – Controller Binding,
  - Select your controller from the drop-down list.
  - **Make sure the controller's name is *EXACTLY* the same (your device vs configuration file)!**  
If the name differs – you've downloaded incorrect file during **Step 3**.  
The serial (SN-XXX-XXX) might be different – that's expected.
  - Click "Apply changes"
  - Save your project once again

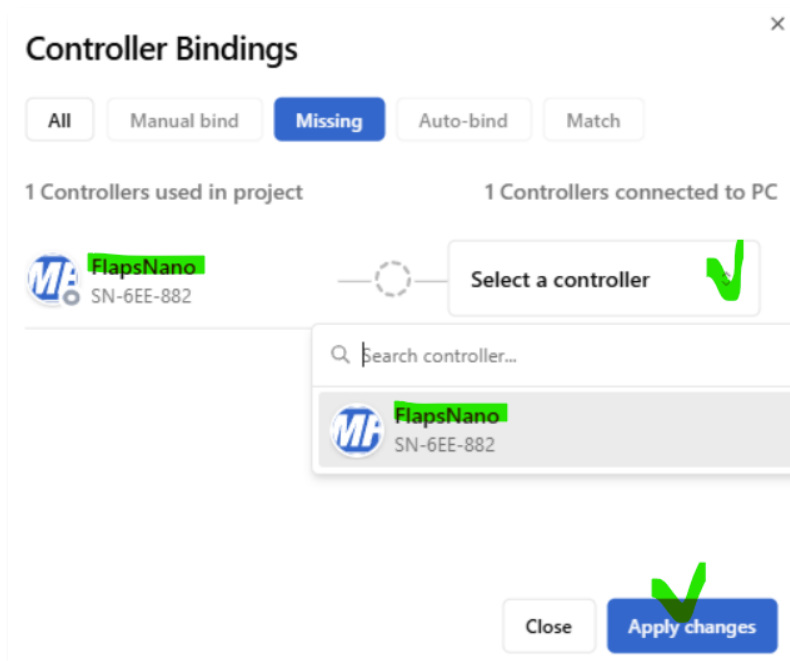

11. Run the project, start the sim and enjoy the flight!

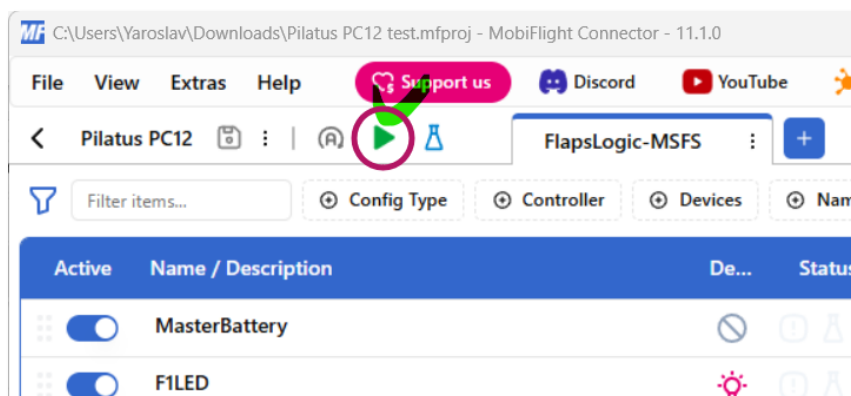

12. Next time you can run your project directly from Mobi front page, just ensure controller status is green:

